

TROUBLESHOOTING GUIDE

Electronics Module has Green Battery Light Only - Cart will not Operate

Problem: Main Battery is attached to the Electronics Module and the ON button is pushed. Green Battery Light comes on but when the STOP/GO button on the Transmitter is pushed no other lights come on.

Possible Causes: Check that the Transmitter light blinks when it is turned on. If the light is dim or if there is no light at all, change the batteries in the Transmitter. Slightly bend in the four (4) tabs that the batteries contact before you install the new batteries. Make sure that all four batteries are facing the proper direction as indicated by the diagram printed on the circuit board, as this has been a common problem in the past. Reinstall rear cover and turn the Transmitter back on. If the cart turns on and functions properly the problem was low batteries. Make sure to change the batteries in the Transmitter every 12 to 15 rounds to prevent this problem. Also, if the cart is not going to be used for long periods of time, such as winter storage, the batteries need to be removed to prevent possible leakage of the batteries causing damage to the circuit board.

If the cart still will not function check that the Transmitter light is blinking. If there is no light, the Transmitter and the Electronics Module will need to be returned to J-Tech for repair. Try plugging in the Emergency Switch located in the utility bag. On the back of the Electronics module there is a piece of black tape, remove the tape and plug the emergency switch into the modular plug. Make sure that the Electronics Module is turned on and press the middle button on the Emergency Switch. If the motor turns on then the problem was most likely in the Transmitter. If you still have no power the problem may be in the Motor itself. If this is the case you will need to contact Customer Service for further instructions.

Call Customer Service if you have any Questions