



SAFETY RULES



Safe operating practices for remote control golf carts.

1. GENERAL OPERATIONS:

Read and understand all instructions in the manual before use.

Only allow responsible adults who are familiar with the instructions to operate the machine.

Never carry passengers or pets on cart.

DO NOT operate at long ranges where you can't judge the distance from objects, people, or water.

Always operate cart with one hand on handle in close quarters, congested areas, narrow cart paths, or paved areas.

Avoid dropping your transmitter.

Do not immerse transmitter in water. Doing so will void warranty.

2. SLOPE OPERATION

Use slowest speed setting and keep one hand on handle on paved or steep downhill grades. Use **STOP** button if additional breaking is required.

3. CHILDREN

DO NOT allow children to operate cart.

Store transmitter in secure place to prevent unauthorized use.

DO NOT operate remote control in the vicinity of small children.

4. BATTERY

Read and follow all instructions for safe use and charging of batteries.

Never use any charger other than Dynamis automatic charger supplied with the product.

SAFETY ALERT SYMBOL AND NOTATIONS

The following safety notations are used throughout this manual to call attention to special information of operating procedures. Understand the message in each notation and be alert to the possibility of personal injury.

1. NOTE: A **NOTE:** points out general reference information regarding proper operation and maintenance practices.

2. IMPORTANT: AN **IMPORTANT** statement indicates specific procedures or information that is required to prevent damage to the machine.



This safety alert symbol is used to attract your attention!

Personal safety is involved!

When you see this symbol, become alert

HEED IT'S MESSAGE!!

BEFORE YOU BEGIN



***IMPORTANT* DO NOT ATTEMPT TO
UNFOLD OR OPERATE
DYNAMIS UNTIL YOU HAVE READ THE INSTRUCTIONS!!**

UNPACKING DYNAMIS

NOTE: Battery should be charged a minimum of 15 hours prior to first use.

1. Read and understand Battery Care & Maintenance section of Manual.
2. Lift out box containing battery charger.

NOTE: DO NOT attempt to use battery charger until you are familiar with proper use and safety information.

3. Hook up charger to battery.
4. Lift Caddy out of box by lifting on central point of frame.

NOTE: Your Dynamis Remote transmitter is supplied with four (4) premium quality Alkaline "AAA" batteries already installed. With average use, a set of batteries should last approx. 10 rounds. (If batteries are low, your cart may experience erratic behavior.) If cart is unused for longer than one month remove transmitter batteries to prevent possible battery leakage causing damage to transmitter.

ACID DAMAGE TO TRANSMITTER IS NOT COVERED UNDER WARRANTY!!

Recommended battery: Top quality alkaline

DO NOT use energizers

The batteries negative end does not always make good contact in our transmitter

Energizer titanium are OK

OPERATION

PREPARING DYNAMIS FOR USE

- STEP #1** Swing lower bag support forward.
- STEP #2** Release front wheel latches (for 12 volt model only) and swing wheels outward into locked position.
- STEP #3** Loosen both pivot knobs and pull handle upright. Loosen pivot knobs enough so that notched joints don't rub together causing wear.
- STEP #4**
- a) Tighten lower pivot knob.
 - b) Adjust handle so that club heads do not touch or rest on handle or frame!
 - c) Tighten upper knob to hold in place.
- STEP #5** Swing upper bag support forward.
- STEP #6** Rotate electronics housing up and tighten thumb screw.
- STEP #7** Install battery and strap into place for 12 volt model.
NOTE: Battery lays on its side with manufacturers markings facing up.
For 24 volt battery pack insert bottom lip of pack into the two battery holders that are mounted on the frame at the front of the cart. Gently lower the pack onto the frame and secure by tightening the hold down screw.
- STEP #8** Plug battery harness into electronics. **Important!** Use care when plugging into electronics! Rough handling may cause damage to plug ends.
- STEP #9** Install golf bag by laying golf bag on lower and upper bag supports and secure with attached straps. **Important!** Club heads should NOT touch or rest on any part of Dynamis handle or frame. The entire frame of the cart is the antenna. Metal contact with the frame may result in interference between transmitter and electronics housing causing erratic behavior.

